



№	Артикул	Наименование	Кол-во
1	8440-431702EVO	Oil Tank Cap Assembly	1
1-1	8024-432101-01EVO	Oil Tank Cap Cover	1
1-2	8020-431701EVO	Oil Tank Cap	1
1-3	8208-431901EVO	Sealing Ring	1
1-4	8088-481502EVO	Hook	1
2	8341-491801EVO	Rubber Cushion	1
3	8440-439401EVO	Oil Tank Assembly	1
3-1	8165-439401EVO	Oil Tank	1
3-2	8335-481201EVO	Valve	1
3-3	8342-437501-01EVO	Spring	1
3-4	8208-462503EVO	Sealing Ring	1
3-5	234-1003EVO	Translucent Oil Tube	0.12m
4	8422-431701-01EVO	Power Cord & Plug	1
5	8332-491901-01EVO	Cable Sheath	1
6	8SJGB40-12DEVO	Self-tapping Screw	5
7	8184-282102EVO	Pressboard	1
8	8411-522201EVO	Terminal set	2
9	8413-622003EVO	Connection Wire	1
10	8413-463102EVO	Connection Wire	1
11	8342-432101EVO	Switch Torsion Spring	1
12	8312-439401EVO	Switch Button	1
13	8342-463002EVO	double Torsion Spring	1
14	8312-433501EVO	Anti-self-locking Button	1
15	8042-481601-01EVO	Micro Switch	1
16	8087-438401EVO	Intermediate Link Rod	1
17	8416-000006EVO	Two-pin Capacitor	1
18	8413-692283EVO	Connection Wire	1
19	8413-433402EVO	Connection Wire	1
20	239-0044EVO	Copper Tape	32mm
21	233-1003EVO	Heat Shrink Tube	0.1m
22	8SJGB40-16DEVO	Self-tapping Screw	22
23	8004-439401EVO	Motor Cover	1
24	8006-439401EVO	Left Housing	1
25	8202-462203EVO	Brake washer	1
26	8440-439405EVO	Front Guard Assembly	1
26-1	8185-439401EVO	Front Hand Guard	1
26-2	8302-438801EVO	Front Guard positioning block	1
26-3	8SJGB40-10DEVO	Self-tapping Screw	2
27	8SJGB40-40DEVO	Self-tapping Screw	1
28	8087-438402EVO	Switch Link Rod	1
29	8321-435301-01EVO	Braking Pad	1
30	8342-435302EVO	Brake spring	1
31	8304-438401EVO	Front Guard positioning block	1
32	8342-526501EVO	Switch Spring	1
33	8182-471902EVO	Pressboard	1
34	8SJGB40-10DEVO	Self-tapping Screw	1
35	8440-439402EVO	Output Shaft Assembly	1
35-1	8BC-220807-STEVO	608Z Bearing	1
35-2	8123-439401EVO	Output Shaft Gear	1
35-3	8342-433901EVO	Brake Torsion Spring	1
35-4	8185-439401EVO	Output Shaft	1
35-5	8BC-221006-SSEVO	6900 Bearing	1
36	8024-439401EVO	Dust Cover	1
37	8440-439403EVO	Motor Assembly	1
37-1	8NA-04D01EVO	Hexagon Lock Nut	2
37-2	8SNAB30-10DEVO	Self-tapping Screw	2
37-3	8292-623301EVO	carbon brush support	1
37-4	8406-439401EVO	carbon brush	2
37-5	8409-439401EVO	Brush holder	2
37-6	8405-439401EVO	Stator Assembly	1
37-7	8BC-220807-STEVO	Bearing 608Z	1
37-8	8402-439401EVO	Rotor Assembly	1
37-9	8BC-281208-SSEVO	Bearing 6001-2RS	1
37-10	8182-439401EVO	Windshield	1
37-11	8206-481003EVO	Stator Screw	2
37-12	8187-439401EVO	Gear box	1
37-13	8SJGB40-16DEVO	Self-tapping Screw	4
38	8213-472202EVO	Rubber connectors	1
39	8213-462502EVO	Tubing connection fittings	1
40	234-1003EVO	Translucent Oil Tube	0.05m
41	8SNAB30-10DEVO	Self-tapping Screw	2
42	8440-439404EVO	Oil pump assembly	1
43	8347-439401EVO	Right enclosure insert	1
44	8342-462304EVO	Tension spring	1
45	8128-462202EVO	Sprocket	1
46	8CE-07BEVO	E-ring	1
47	8006-439402EVO	right housing	1
48	8SJGB40-25DEVO	Self-tapping Screw	3
49	8202-438801EVO	Thermal insulation gaskets	1
50	8SEAB40-12EVO	Self-tapping Screw	1
51	8208-438301EVO	Sealing Ring	1
52	8181-433501-01EVO	Buffer plate	1
53	8440-491105EVO	Adjusting Rod Assembly	1
54	8313-436501EVO	Adjusting knob	1
55	8208-438801EVO	end cover seal ring	1
56	8021-439401EVO	end cover	1
57	8334-463101EVO	bushing	1
58	8313-438801EVO	Bar Adjustment Locking Knob	1
59	8331-430402EVO	Bar Sheath	1
60	XXX-XXXX	Saw Chain	1
61	XXX-XXXX	Guide Bar	1